 


Windsock Flying Poles

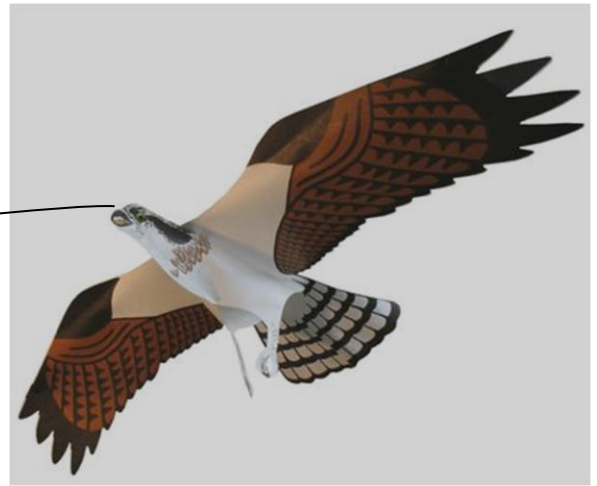

Instructions for the Windsock Pole

 


Screw on end cap


Butt section of pole when collapsed

end plug

- 1). To extend the pole out, remove the plug, tilt pole so the sections come out. Grasp the smallest section. Extend the smallest section completely and twist tightly against the next largest section. Work your way through each of the sections, twisting tight till the pole is fully extended.
- 2). When collapsing place the end of the pole on the ground or hard surface (stops breaking of screw on cap as sections drop inside pole). Un-twist the two largest sections and allow the smaller section to drop inside. Work your way to the smallest section, install end-plug and store the pole.
- 3). The bottom of the pole has a screw on the end cap. This is not the end used to extend out the pole. This end allows you to install replacement parts or to clean all the individual parts of sand and debris.

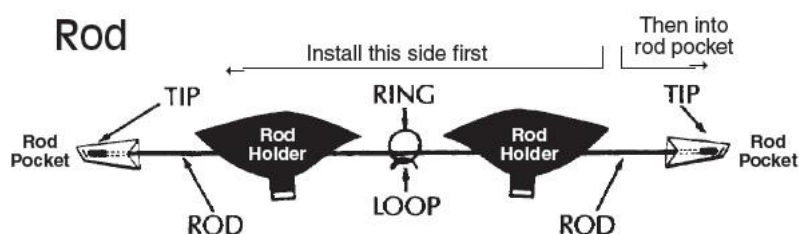

 Insert rod under rod holders, thru ring, under rod holder and into pocket. Then install other end of rod into other pocket

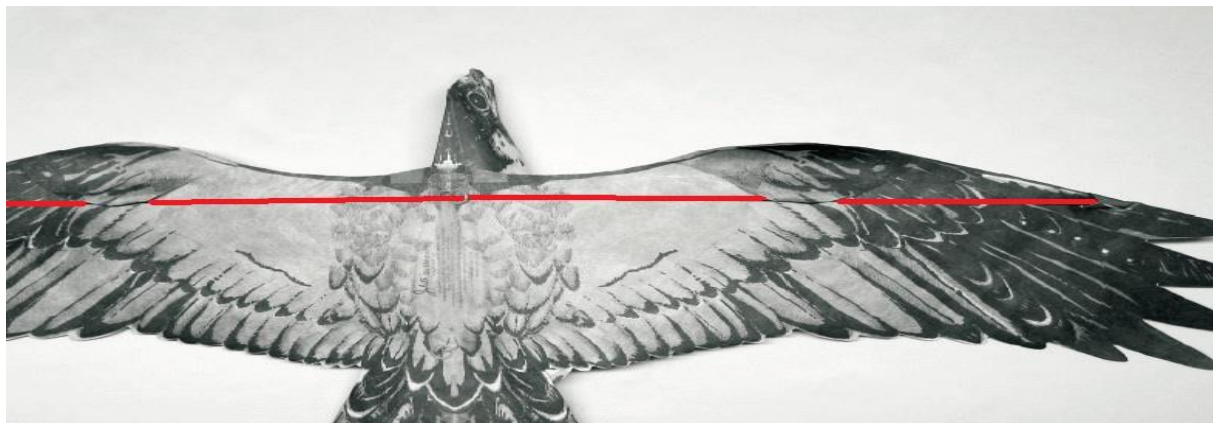

Push or drive this ground mount into hard soil or sand.

The ground mount requires a Ring. The Ring wraps around the Fiberglass Poles and snugle holds the pole in place.



The Line Rig that is 7 feet of twisted nylon line with a swivel on each end which will work with all Poles.

If you have problems with the line twisting around the pole, use the Windsock Arm which is only possible for the 28" and 31" poles.

Remember

Roll back the leading edges of the wings over the rod!

Roll up edges of the tail!

Roll up the ends of the wings!

Attention: The Birds and poles need to be taken down if the wind is over 50 km / h!!